

CDMA 1X
WIN
au by KDDI

Contents/Ready

Phone Call

Inputting
Characters

Address Book/
Pair Function

Mail

Camera

EZweb

EZ Navi

au Media Tuner

Other Functions

Troubleshooting/
Remote Ctrl Lock

Index

GZOne W62CA

Basic Manual

CASIO

Introduction

Thank you for purchasing the W62CA.

Before using it for the first time, be sure to read the Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

Printed Manuals for the W62CA (Japanese)

The W62CA comes with a Basic Manual and an Instruction Manual.

For information about basic operation



Basic Manual
Refer to this English PDF manual.

For detailed information about each function



Instruction Manual
English version not available.

The following information is also available on the au website.

- To download the Basic Manual or Instruction Manual
(<http://www.au.kddi.com/torisetsu/index.html>)
- To access a keyword searchable au On-Line Manual
(<http://www.au.kddi.com/manual/index.html>)

You can also access the au On-Line Manual using EZweb.

EZweb Access

au one Top

- auお客さまサポート (au Customer Support)
- 調べる (Information)
- オンラインマニュアル (On-Line Manual)

Info

- ◎All mentions of "the W62CA" in this manual refer to "the G'zOne W62CA."
- ◎The typeface, fonts, and colors of the texts on the screens shown in this manual may differ from the actual contents. Also, certain icons and the scroll bars may be omitted.
- ◎The typeface, screens, icons shown in this manual and explanations are made on the initial settings of main unit color "Sparkling Green."

Cellphone Etiquette

Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

Some locations do not allow the use of cellphones.

- Using a cellphone while driving is dangerous and prohibited by the Traffic Control Law.
- Using a cellphone inside of an aircraft is prohibited by the law. Be sure to turn off your cellphone before takeoff.



Watch out where you use your cellphone, and keep your voice down.

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ringtone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain permissions first.



Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities prohibiting the use or possession of cellphones.



Cellphone Basics

Features

Camera

Shoot photos and record movies, and send them by e-mail.

▶ Page 59



EZ Navi

EZ Navi Walk, Passenger Seat Navi, Evacuate Navi and Security Navi allow you to get various kinds of location information. They are all built-in functions.

▶ Page 72

EZ FeliCa

Use the cellphone for shopping by using electronic money, or use it as member's cards, point cards, and so on.

au Media Tuner

Enjoy using Television (1Seg) and EZ Channel-Plus.

▶ Page 75



Security Setup

Select either "Safety Buzzer" or "HOT DIAL" as reliable setting function.

▶ Page 82



Mail

Send mail messages to other cellphones or to PCs.

▶ Page 48



EZweb

Download "Chaku-Uta®"/other data or access sites.

▶ Page 64



Water & Shock Resistance

W62CA provides water and shock resistance against the rain and strenuous motions/shocks arisen in your daily life.

G'zGEAR

Six tools with GPS and direction/temperature/acceleration sensor functionalities that assist your outdoor activities are available.

Info

For other useful functions, see page 82.

Manner Mode and Answer Memo

Manner Mode

Use Manner Mode to turn off the ringtone so as not to bother others around you.



While the standby screen is displayed, hold down **マナー** for at least one second.

▶ Page 35

Answer Memo

If you cannot answer a call, Answer Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down **リダイヤル** for at least one second.

▶ Page 36

Checking Power, Signal Strength, and Battery Level

Normally leave the phone turned on.

 


The phone needs to be turned on to make and receive calls.

Hold down **電源** for at least 2.5 seconds to turn on W62CA. After a while, W62CA turns on with tone and the standby screen appears.

▶ Page 14

You cannot talk on the phone if it is unable to receive a signal.




Signal strength is low in some areas, even if they are within the service area.



indicates the current signal strength. ▶ Page 14

 Keep an eye on the battery level.




The phone may not function properly if battery power is low.




indicates the current battery level. ▶ Page 14

Never use your cellphone while driving!

Do not use the cellphone while driving a car/motorcycle/bicycle. It may cause a traffic accident. Use of the cellphone while driving a car/motorcycle is forbidden by the law. Use of the cellphone while driving a bicycle may be punished by the law too.

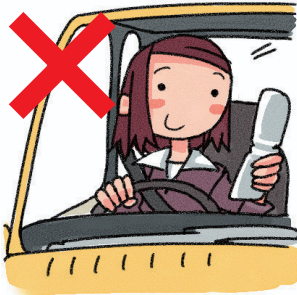

× Reading mail or looking at the display.

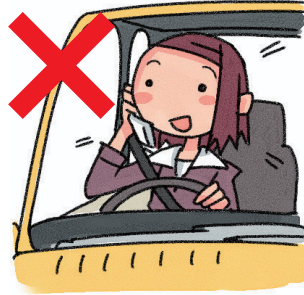



× Holding a cellphone in your hand to talk.

Turn off your cellphone or use Drive Mode while driving.

Drive Mode

 In Drive Mode, the phone will play the message “ただいま移動中ですので電話に出ることができません...” (I am traveling and unable to answer the phone right now...), and then ask the caller to leave a message using Answer Memo.

While the standby screen is displayed, press , and press  (Drive) to turn on Drive Mode.




Beware of spam and One-ring Calls!

If you get spam

You can set up mail filters to block specific mail or spoof mail.

The following are the main features your cellphone uses to block spam.


- Blocking of “未承諾広告※” (unsolicited advertisement) mail
- Blocking of specific mail
- Blocking of spoof mail

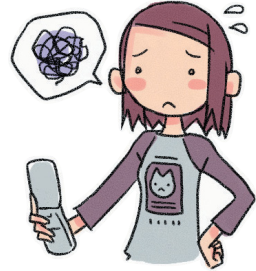

Page 55

Beware of One-ring Calls!

A “One-ring Call” (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

If W62CA received a “One-ring Call,” the  icon appears at the head of an incoming history.



Page 31

Disaster Message Board Service

Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the “災害用伝言板” (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking the safety information

- ◆ Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.*
 - ※ Disaster Message Board information can be accessed from cellphone of other manufacturer's, PHS, or PC at <http://dengon.ezweb.ne.jp/>.


Access method



▶▶▶ au one Top ▶▶▶ 災害用伝言板
(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>



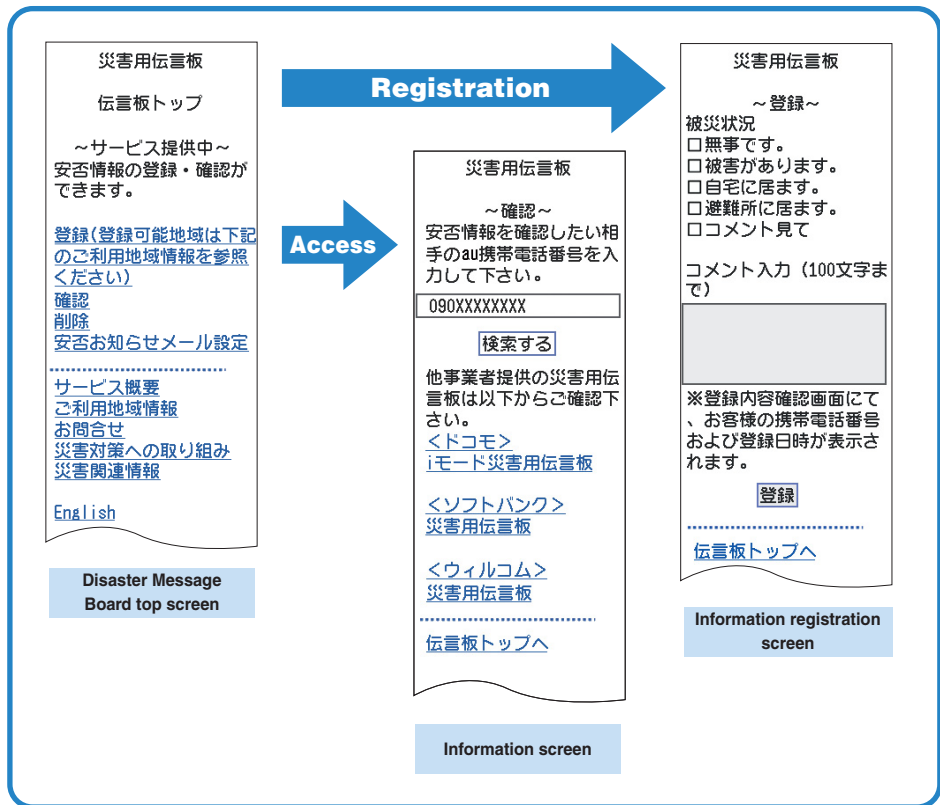

※ Registration contents are retained for up to 72 hours.

※ You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered entries, automatically overwrites the oldest entry.

※ You can view a Disaster Message Board demonstration at:

[E](#) → au one Top → auお客さまサポート → 災害用伝言板(デモ版)

(au Customer Support) (Disaster Message Board (Demo))

※ To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

Contents

Cellphone Etiquette 1

Mind your manners! 1

Cellphone Basics 2

Features 2
Manner Mode and Answer Memo 3
Checking Power, Signal Strength, and
Battery Level 3
Never use your cellphone while driving! 4
Beware of spam and One-ring Calls! 5
Disaster Message Board Service 6

Contents 8

Ready 10

Checking the Contents of the Package 10
Names of Parts 11
Charging the Battery Pack 12
Turning On Power 14
Initial Values 14
Security Code and Passwords 15
Selecting English as the Display Language
..... 16
Operation Basics 18
Display Indicators 19
Main Menu 20
Initializing E-mail and EZweb 24
Looking Up Your Current Phone Number
and E-mail Address 25
Changing Your E-mail Address 26

Phone Call 28

Making a Call 28
Making an International Call 29
Answering a Call 30
Redialing (Outgoing Histories/Incoming
Histories) 31
One-ring Calls 31
Changing the Ringtone 32
Adjusting the Ringtone Volume 34
Adjusting the Earpiece Volume during a
Call 35
Turning On Manner Mode 35
Turning On Answer Memo 36
Playing an Answer Memo 37

Inputting Characters 38

Inputting an E-mail Address 39
Inputting Pictograms 40

Address Book 41

Registering an Address Book 41
Editing an Address Book Record 43
Adding Outgoing or Incoming History
Data to the Address Book 44
Dialing from the Address Book 45

Pair Function 46

Registering a Pair Partner 46
Making a Phone Call or Sending Mail to a
Pair Partner 47

Mail 48

Using E-mail 48
Using C-mail 49
Creating and Sending E-mail Messages 50
Reading Received E-mail Messages 52
Reading an E-mail Message with an
Attached Photo 53
Replying to a Received E-mail Message 54
Avoiding Spam 55
Creating and Sending C-mail Messages 56
Reading Received C-mail Messages 58

Camera 59

Using the Camera	59
Shooting a Photo	61
Viewing Photos	62
Attaching a Photo to an E-mail Message.....	63

EZweb 64

Using EZweb.....	64
Displaying the au one Top	65
Bookmarking Sites You Frequently Access	66
Viewing a Bookmarked Site	67
Checking Charges	67
Downloading Chaku-Uta®/Chaku-Uta-Full®	68

EZ News Flash/au one Gadget 70

EZ News Flash/au one Gadget Features.....	70
Setting EZ News Flash service	71

EZ Navi 72

EZ Navi Features	72
------------------------	----

au Media Tuner 75

au Media Tuner Features	75
Configuring au Media Tuner Initial Settings	77
Using Television (1Seg).....	79
Exiting au Media Tuner.....	81

Other Functions 82

Security Setup Features	82
-------------------------------	----

Troubleshooting 84

If you lose your W62CA	85
------------------------------	----

Index 88


Ready

Before using the W62CA, check the contents of the package coming with your W62CA. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn the power on, etc.




Checking the Contents of the Package


● W62CA

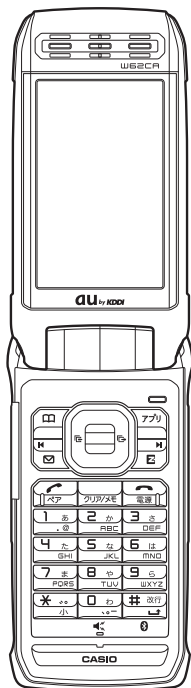

● Battery pack (62CAUAA)

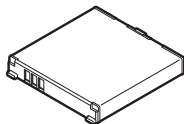


● Desktop holder (62CAPUA)

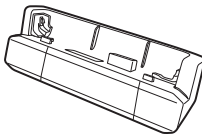


● Casio round-type earphone jack conversion adaptor 03 (03CAQNA)



 ● Casio USB cable 03 (MiniB) (03CAHUA)



● SONY MDR-E0921 (sample)

 

● CD-ROM



● Lock driver (sample)



● Warranty (Japanese)

● Osaifu-Keitai® Basic Manual (Japanese)

● LISMO Installation Guide (Japanese)

● Basic Manual (Japanese)

● Operating Precautions (Japanese)

● Global Passport mobile rental service Owner's Guide (Japanese)

● Promotional Fliers (Japanese)

● Instruction Manual (Japanese)




Info


- The microSD™ memory card is not included.
- An AC adaptor is not included. It is up to you to purchase a common AC adaptor 01/02 (option).

Names of Parts

Front

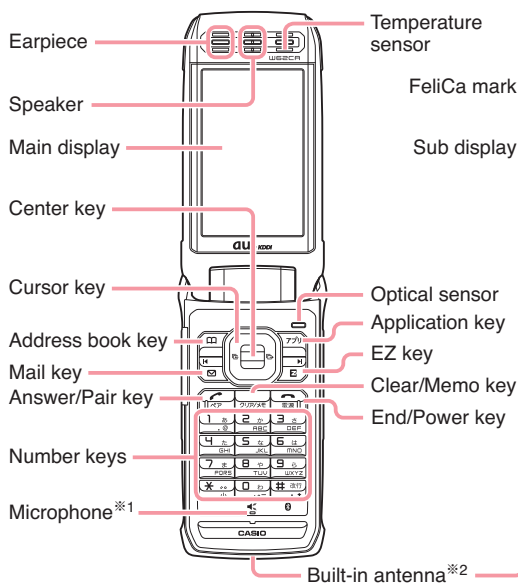

Back

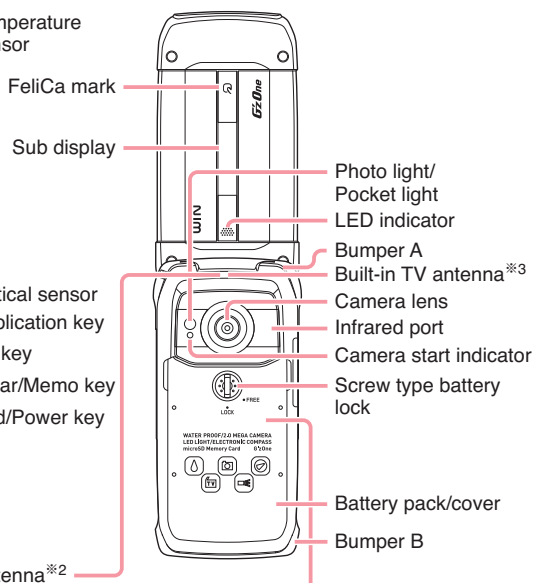

※1 During a call, do not cover the microphone with your hands or your chin.

※2 Take care to avoid covering the built-in antenna with your hand when making a call, using EZweb, using PC Site Viewer and when accessing GPS information.

※3 Take care to avoid covering the built-in TV antenna with your hand when viewing with Television (1Seg).



Attach/remove au IC-Card or microSD™ memory card after turning the phone off and uninstalling the battery pack.

microSD™ memory card slot

au IC-Card[※]



※Do not take out this card if not necessary as your number is recorded on it.

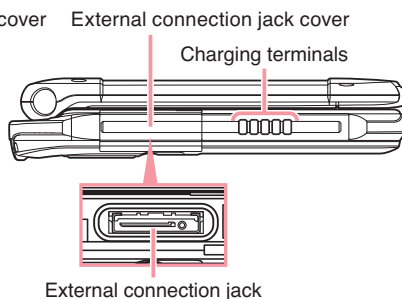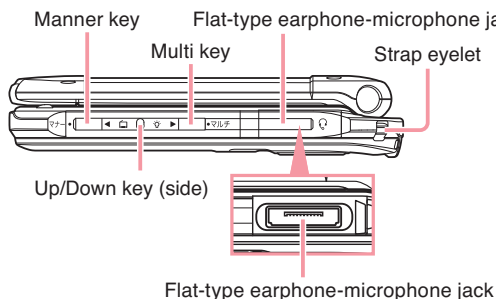Side




Charging the Battery Pack

The battery pack that comes with the phone is not fully charged when you purchase it. Be sure to charge the battery pack before using the W62CA for the first time. Charging takes about 140 minutes.

You should recharge the battery pack whenever the battery level icon shows  or .

Aligning the locking tabs of the desktop holder with the slots on the sides of the phone, attach the phone to the holder in the sequence

②-1, ②-2.

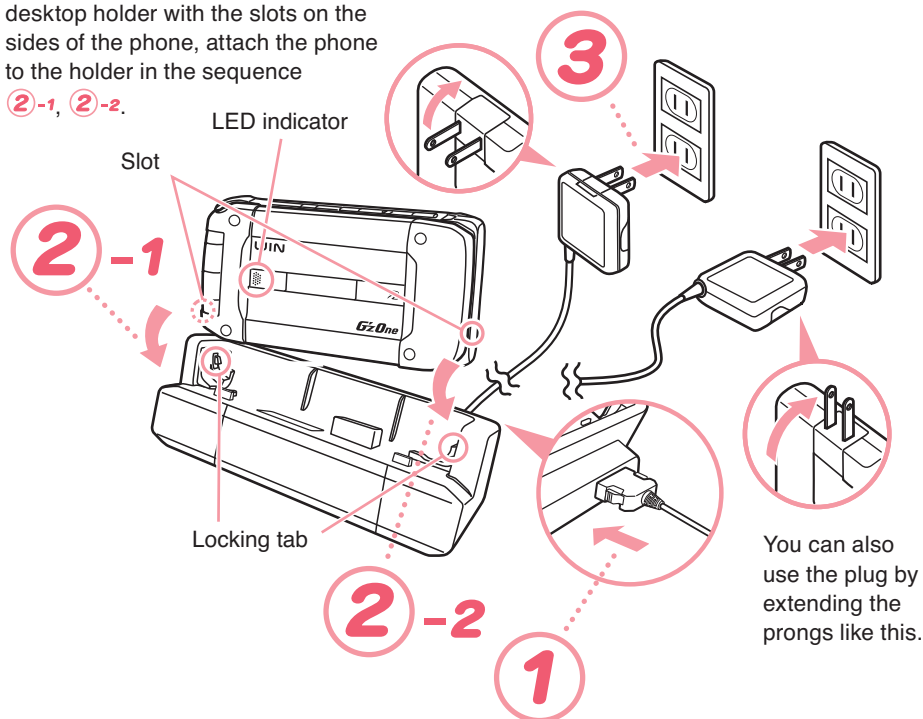

Check the shape of connectors before connecting, and ensure that you plug them in as far as they will go.

CAUTION

- ◎ You must purchase a common AC adaptor 01/02 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- ◎ Whenever connecting or disconnecting the common AC adaptor 01/02 (option) to the desktop holder, make sure the connector on the back of the desktop holder is positioned horizontally.

1

Connect the common AC adaptor 01/02 (option) to the desktop holder.

Check the shape of the connectors to ensure they are aligned correctly before you connect.


Trying to force a connection may damage the connectors.

2

Attach the closed phone to the desktop holder in the sequence ②-1, ②-2, aligning the locking tabs of the holder with the slots on the sides of the phone.


3

Fold out the power plug of the common AC adaptor 01/02 (option), and then plug it into a 100V AC power outlet.

This will cause the W62CA LED indicator to light red, and  (charging battery icon) to display. When charging is completed, the LED indicator will go out.


To remove the W62CA from the desktop holder, hold the holder by hand and remove W62CA.

※ You can connect the common AC adaptor 01/02 (option) to the W62CA directly to charge the battery pack.

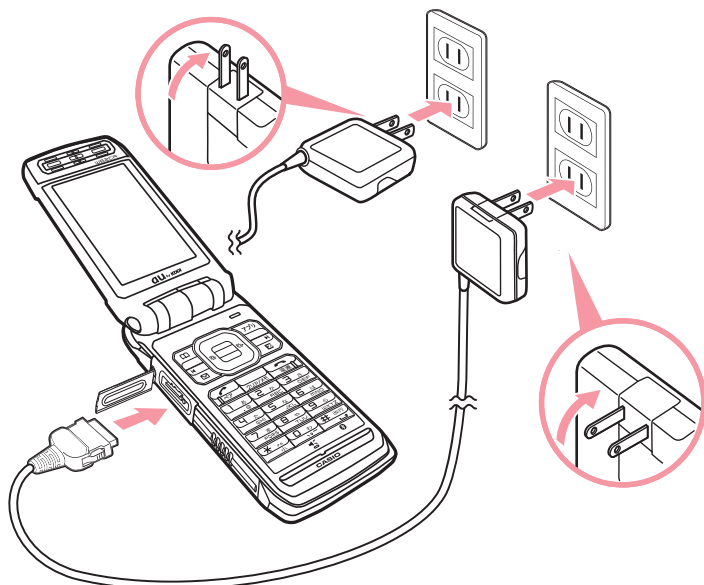

Fully open the external connection jack cover, check the shape of connectors and insert it horizontally.



Turning On Power


1 Hold down  for at least 2.5 seconds.



The message “Now Loading...” will appear on the display for a short while, followed by the standby screen.

Icon					
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range


- Communication is not possible while the signal strength icon is  (Out of Range).
- Communication may not be possible while the signal strength icon is  (Very Weak).

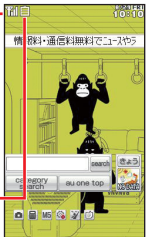

Standby screen

Icon					
Battery Level	High	Medium	Low	Fully Discharged	Charging

Turning off power

Hold down  for at least 1.5 seconds.

Initial Values

The following are the initial settings of the phone.

Lock No.	1234	Font Size	Input Size	Slightly Large
Caller ID	ON		Mail Display	Medium
Incm Caller Disp	Display		EZweb Display	Medium
Profile	Blank		Address Book	Slightly Large
			History	Slightly Large
			Phone No.	Slightly Large

Security Code and Passwords

The W62CA lets you use the numbers and passwords described below. Be sure to take steps so you do not forget your numbers and passwords. You will need them to perform various operations and to access subscription services.

Security Code

Usage Examples	① For remote operation of the Answering Service (Voice Mail) and Call Transfer from a standard phone
	② For inquiries, applications, and service modifications using au Customer Service Center voice guidance, au website, and EZweb
	③ For changing e-mail settings
Initial Value	4-digit number you entered on your subscription contract

Lock No.

Usage Examples	For modifying various phone settings
Initial Value	1234

EZ Password


Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Value	4-digit number you entered on your subscription contract


Premium EZ Password

Usage Examples	① For entering and canceling subscriptions for EZweb fee-based content paid for using “まとめてau支払い” (au Collective Payment Service)
	② For purchasing products from EZweb sites that use “まとめてau支払い” (au Collective Payment Service)
Initial Value	4-digit number you entered on your subscription contract



Selecting English as the Display Language


 
1

While the standby screen is displayed, press .



2

 Use  to select “機能” (Function), and then press  (選択) (Select).

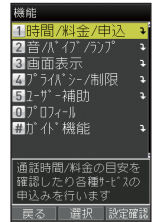

3

 
Press  (画面表示) (Screen Display).



4

Press  (Set Language).

5

Press  (English).

This selects English as the display language.




CAUTION

Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day format.

Operation Basics

■ Key functions

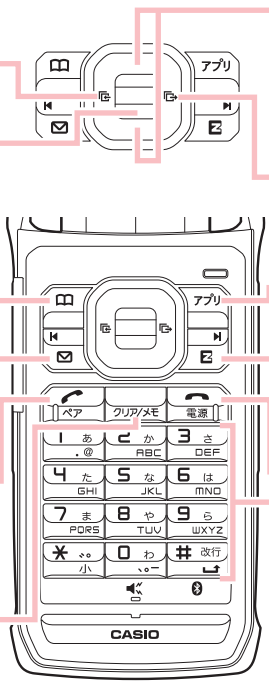


Left Side Keys:

- Back Arrow:**
 - Displays incoming histories.
 - Selects an item.
- Menu Key:**
 - Displays the main menu.
 - Applies an item.
- Address Book Key:**
 - Displays the address book.
 - Creates a new address book (hold down for at least one second).
- E-mail Key:**
 - E-mail
 - C-mail (hold down for at least one second)
- Call Key:**
 - Dials/answers a phone call.
 - Displays the Pair Function.
- Memo Key:**
 - Memo
 - Toggles Answer Memo on and off (hold down for at least one second).
 - Deletes a character.
 - Returns to the previous menu screen.

Right Side Keys:

- Up/Down Arrow:**
 - Selects EZ News Flash telop/window or au one Gadget.
 - Displays the standby shortcut icon.
 - Selects an item.
- Right Arrow:**
 - Displays outgoing histories.
 - Selects an item.
- Apps Key:**
 - Displays the EZ apps menu.
- EZweb Key:**
 - Displays the EZweb menu.
- Power Key:**
 - Power on (hold down for at least 2.5 seconds).
 - Power off (hold down for at least 1.5 seconds).
 - Hangs up.
 - Terminates a function.
 - Returns to the standby screen (hold down).
- Number/Text Key:**
 - Inputs phone number.
 - Inputs text character.

 ■ Side key functions



Side Keys:


- Manner Key:**
 - Toggles Manner Mode on and off (hold down for at least one second).
- Multi Play Key:**
 - Displays Multi Play Window.
- Media Tuner Key:**
 - While the standby screen is displayed, hold down for at least one second to light the pocket light and hold down for at least one second to start au Media Tuner.
 - Page scroll at browser display.

Info

- ◎ If you lose track of where you are or if you make a mistake:
Press **Memo** to scroll back to the previous screen.
Hold down **Power** to return to the standby screen.
- ◎ When **Guide** is displayed in the lower right corner of the photo screen etc., pressing **Guide** will display key help.
- ◎ Holding down **Menu** for at least one second toggles side key's disabling feature on and off while W62CA is folded.

Display Indicators


The following explains the main icons that appear on the standby screen.

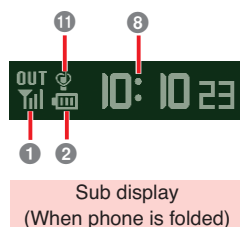







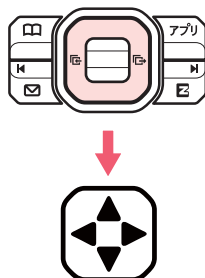




1		Signal strength
2		Battery level
3		The microSD™ memory card (commercial item) is inserted into the cellphone.
4		During phone call or LISMO Player/au Media Tuner on
5		EZ apps (BREW®) on
6		EZweb browsing in progress/PC Site Viewer on
7		Unread mail
8		Current time* The date and time are set automatically.
9		Selects the user defined icons such as Photo (DSC Mode), calculator, Emission OFF Mode, G'zGEAR, Sports Timer, and "01 カシオからのご案内" (information from CASIO)(Notepad 01), etc. by pressing and .
10		FeliCa Lock on
11		Manner Mode on
12		Ringtone off
13		Vibrator on
14		Answer Memo on
15	-	EZ News Flash telop
16	-	EZ News Flash window

※ A hyphen (-) may appear in place of the current date.

Key symbols used in this manual




The cursor key is described in this manual using the key symbols shown below.

	or		key:					
	or		key:					
	,		,		or		key:	

Main Menu

There are four initial main menus (“Carbon pattern,” “G-gallery,” “Eco & Ego G,” and “Simple”) for W62CA.



Pressing  while the standby screen is displayed displays the main menu.


Info

The menu structure depends on the type of the main menu.



■ Using the “Carbon pattern” menu


If your cellphone color is “Burned Black,” the initial main menu is “Carbon pattern.”

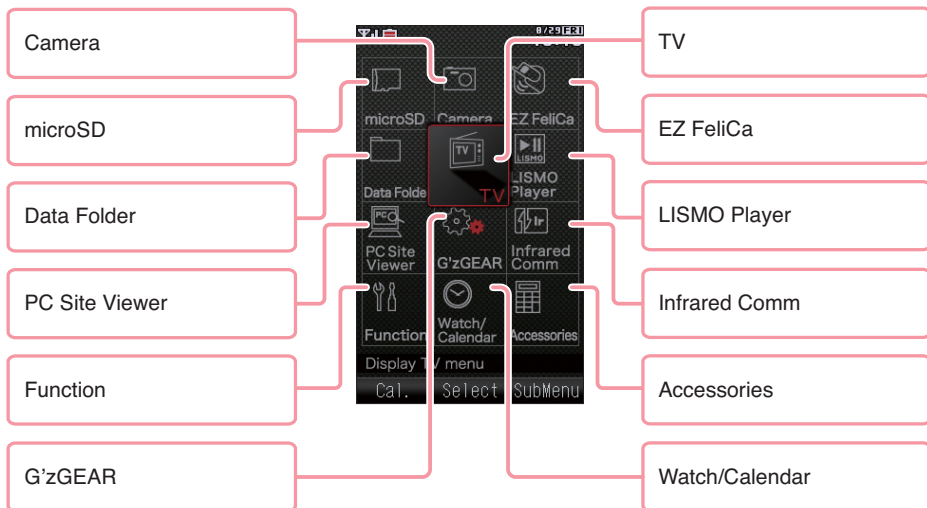Use  to select the icon, and then press  (Select) to access the function associated with the icon.






■ Using the “G-gallery” menu

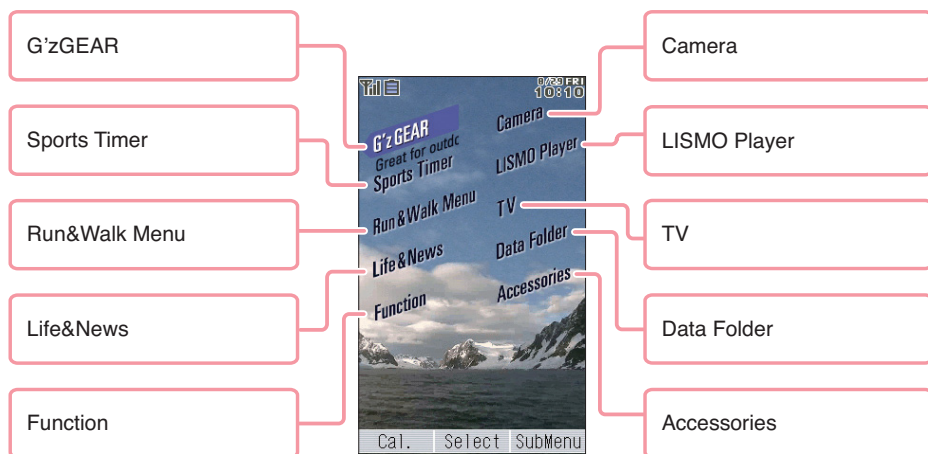If your cellphone color is “Frozen White,” the initial main menu is “G-gallery.” Use  to select the icon, and then press  (Select) to access the function associated with the icon.





■ Using the “Eco & Ego G” menu

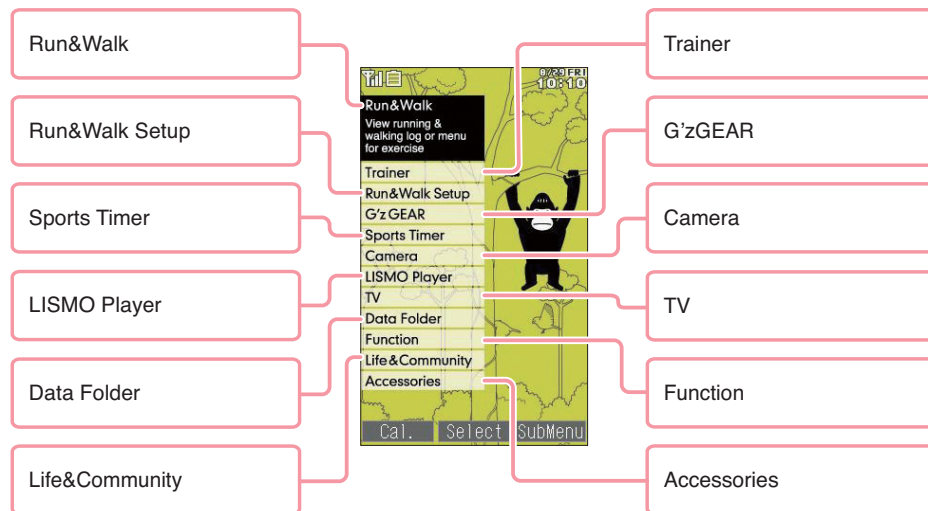
If your cellphone color is “Sparkling Green,” the initial main menu is “Eco & Ego G.” Use  to select the icon, and then press  (Select) to access the function associated with the icon.



■ Using the “Simple” menu

Use  to select the icon, and then press  (Select) to access the function associated with the icon.

Camera	Photo/Movie/Bar Code Reader
LISMO Player	Play music/video clips
G'zGEAR	EARTH COMPASS, EARTH LOCATOR, HEAT GAUGE, SEA TIDE, etc.
Data Folder	Check and play stored data
micro SD	Check and play stored data
Settings	Incoming settings, display settings and other frequently used setting functions
Watch/Calendar	Alarm, Sports Timer, Calendar/Schedule, Task List, and other functions
Accessories	Mobile Dictionary, PC Site Viewer, Infrared Communication, and other functions

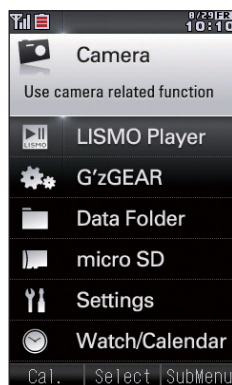



■ Using the Main Menu

 Example: To display the function screen from the main menu.





Standby screen

 


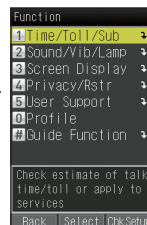
 returns to the previous screen.



Main menu

Press  to select “Function,” and then press  (Select).

 returns to the previous screen.




Function screen



Holding down  returns to the standby screen.

Using Soft Keys

Soft keys are the keys you use to execute the functions along with the bottom of the screen. The table below explains how to assign the soft keys to the on-screen functions. Note that the function of each soft key depends on the currently displayed screen.

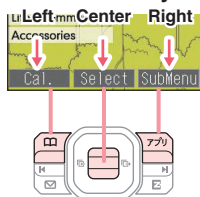


Left soft key	Executes the function on the left.
Center soft key	Executes the function on the center.
Right soft key	Executes the function on the right.

Using Submenus

Pressing the soft key that corresponds to the “SubMenu” at the bottom of the display will display a submenu of various operations related to the function you are currently using.


Example: To open the folder list submenu screen from the folder list screen.


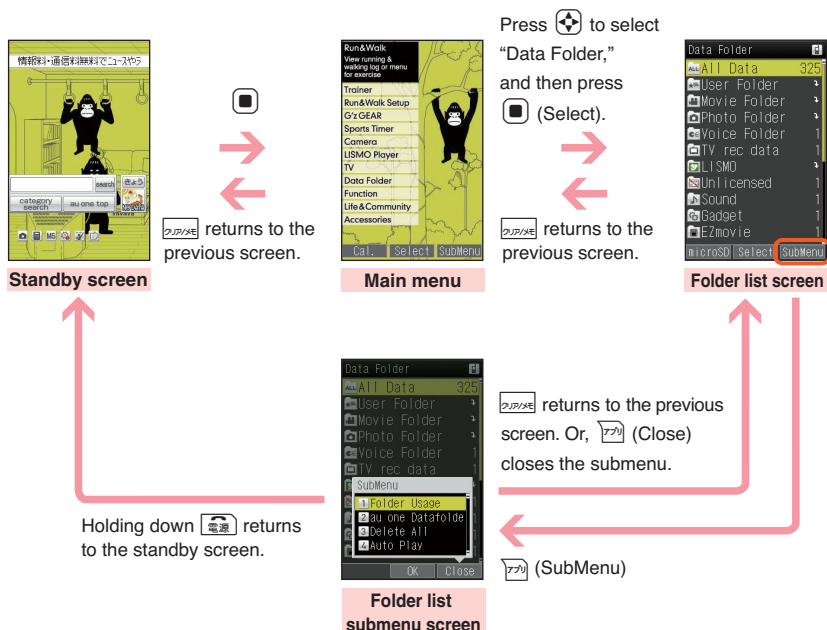


Initializing E-mail and EZweb

An EZweb subscription is required to use e-mail, EZweb or other EZ services. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.



※ You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.

 
1 While the standby screen is displayed, press .

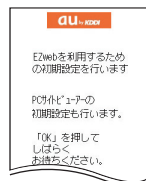


2 Press  (OK).

 Wait until the phone connects to the server for initialization.

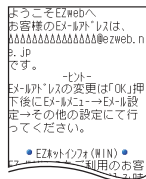

 3 After your automatically assigned e-mail address appears, press  (OK).



Info


Pressing / also allows you to make initial settings.

 
Looking Up Your Current Phone Number and E-mail Address



Ready

1

While the standby screen is displayed, press .



2

Press .

Your current phone number and e-mail address appear.



Changing Your E-mail Address


E-mail address


 
△△△@ezweb.ne.jp

Part you can change


Domain name


1

While the standby screen is displayed, press .

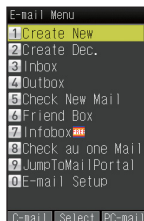



2

 Press  (E-mail Setup).

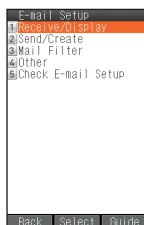



3

 Press  (Other).

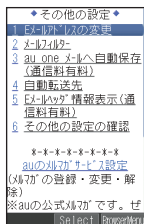




 

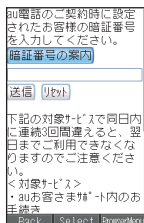4

 Press  (Eメールアドレスの変更) (Change E-mail Address).



5

Enter your Security Code, press  (OK), use  to select “送信” (Send), and then press  (Select). Use  to select “承諾する” (Accept), and then press  (Select).






Ex-Web'12を変更します。
ご希望のEx-Web'12を入力
してください。


※入力時の注意※
1. 半角英数小文字で「
be2web.ne.jp」より左側の
みご入力ください。
2. Ex-Web'12は半角英数字
30文字まで入力可能です

記号は「.」、「-」、「_」が使用
可能です。「.」、「_」は最初
には利用できません。最初
に数字の「0」を使用するこ
とはできません。

Back Select BrowserMenu

6

Use  to select the text
box, and then press  (Input). Enter the e-mail
address you want, and
then press  (OK).

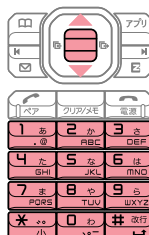

2. Ex-Web'12は半角英数字
30文字まで入力可能です

記号は「.」、「-」、「_」が使用
可能です。「.」、「_」は最初
には利用できません。最初
に数字の「0」を使用するこ
とはできません。

be2web.ne.jp



送信 リセット


前のページへ

Back Select BrowserMenu

To input an e-mail address
→“Inputting an E-mail Address” (page 39)

7

Use  to select “送信”
(Send), and then press
 (Select).

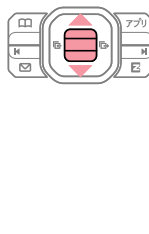

新しいEx-Web'12は
be2web.ne.jp

です。
よろしいですか？

OK
キャンセル

Select BrowserMenu

The e-mail address confirmation screen
appears.

8

Press  to select “OK,”
and then press  (Select).



The message “Update is complete.”
appears to indicate that your e-mail
address has been changed.

 
 
Info

- Your Security Code is the 4-digit number you entered on your subscription contract. If the wrong Security Code is entered three times a day, the setting operation will be disabled until the following day.
- If your e-mail address won't change in step 7:
The new e-mail address you entered may be registered by someone else already. Try entering a different address.

Phone Call

Making a Call

1

While the standby screen is displayed, use the number keys ( to ) of the keypad to enter the phone number you want to call.



When calling a standard phone, you need to enter the area code.

2


Press .



 
After you finish a call, press  to hang up.




※ The caller always hears your voice even when you cover the microphone with your hands.




Outgoing Methods

You can select whether to notify/not to notify your cellphone number to the other party by pressing  (Call) and displaying Outgoing Menu in step 2.

To not notify: Select "Add Special No." in Outgoing Menu →  (OK) → Select "184" →  (Add) → .



To notify: Select "Add Special No." in Outgoing Menu →  (OK) → Select "186" →  (Add) → .

To call without any settings: Select "Voice Call" in Outgoing Menu →  (OK).

• When calling without any settings, your cellphone number is either notified or not notified according to "Caller ID" settings of your phone.

Phone Call

Answering a Call

- 1 Press  to answer an incoming call.
- After you finish a call, press  to hang up.


	フリップ/メモ	
1 あ	2 か	3 さ
4 た	5 な	6 は
7 せ	8 や	9 り
* ++	0 わ	# 移行
小	大	→

Info

Display for Incoming Calls



If the caller's name is in your address book, it appears on the display. If not, only the caller's phone number is displayed.

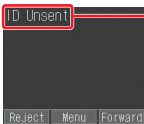


A message appears when the phone number of the caller is not provided for some reason.


ID Unsent: The caller's phone refused to send its phone number.

Payphone: The call is from a payphone.

Not Support: The call is from a phone that does not support caller ID.

 Missed Call Notification




The message "Missed Call X" appears on the display if you did not answer one or more calls. Press  (Select) to check incoming histories (caller phone number, etc.).

To redial a number


→ "Redialing (Outgoing Histories/Incoming Histories)" (page 31)

Redialing (Outgoing Histories/ Incoming Histories)

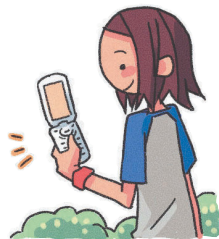

1 While the standby screen is displayed, press .

: Displays outgoing histories.

: Displays incoming histories.



2 Use to select the number you want to dial, and then press .



Info

 
The phone stores up to 50 histories each for the outgoing histories and incoming histories. When a history is created while there are already 50 histories in memory, the oldest current history is deleted automatically to make room for the new one.



One-ring Calls

What is a “One-ring Call”?

A “One-ring Call” is an incoming call that rings your phone only once, which aims it to be stored in your incoming histories. If you redial the number shown in your incoming histories, often you are connected to a dating service or some other service that may bill you very high charges. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.




One-ring Call indicator


 


 
The  icon indicates an incoming call you did not answer. The  icon indicates an incoming call that rang for three seconds or less. These calls may be One-ring Calls with high possibility.


Changing the Ringtone





- 1 While the standby screen is displayed, press , use  to select “Function,” and then press  (Select).

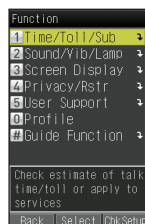



- 2 Press  (Sound/Vib/Lamp).

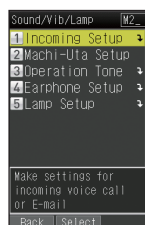

 

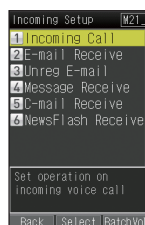
- 3 Press  (Incoming Setup).

 


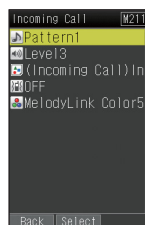- 4 Press  (Incoming Call).





5

  
Use  to select  and press  (Select).





6

Press  (Original).

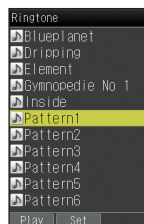To hear the currently selected ringtone, press  (Play).

 


7

Use  to select the ringtone you want, and then press  (Set).



8

Press  (OK).

The ringtone is set.



Info

You can also download a “Chaku-Uta[®]” from the Internet and use it for your ringtone.

→“Downloading Chaku-Uta[®]/Chaku-Uta-Full[®]” (page 68)

Adjusting the Ringtone Volume

To adjust the ringtone volume, perform steps 1 through 4 under “Changing the Ringtone” (page 32), and then continue with the following steps.




1

Use to select and press (Set).



2

Use to adjust the ringtone volume, and then press (Set).

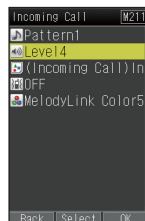

- : Increases volume.
- : Decreases volume.

3


Press (OK).




Info

- STEP ↑ : Ringtone volume gradually increases.
- STEP ↓ : Ringtone volume gradually decreases.
- OFF: Ringtone does not sound.

Adjusting the Earpiece Volume during a Call

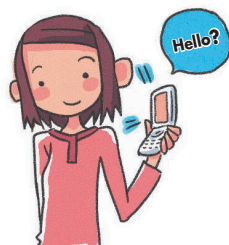

1 During a call, use  to adjust the volume.

: Increases volume.

: Decreases volume.

 



You can adjust the earpiece volume (level 1-5 and Max).


Turning On Manner Mode


While Manner Mode is set to on, the phone alerts incoming calls to you by vibrating.



 1 While the standby screen is displayed, hold down  for at least one second.


 
This turns on Manner Mode. The  icon appears on the display while Manner Mode is turned on.



Turning on Manner Mode also turns on Answer Memo, which is indicated by  on the display. While Manner Mode is set to on, the phone vibrates without sounding its ringtone.

To turn off Manner Mode, hold down  for at least one second.

Info

While the standby screen is displayed, you can press  to select the Manner Mode type. Holding down  for at least one second while the standby screen is displayed will enable the Manner Mode type you selected.


Turning On Answer Memo



1

While the standby screen is displayed, hold down **クア/メモ** for at least one second.



This turns on Answer Memo. The  icon appears on the display while Answer Memo is turned on.

You can use Answer Memos (up to 6 memos), and each memo can contain up to 30 seconds recording time.

To turn off Answer Memo, hold down **クア/メモ** for at least one second.

Info

◎ Using the Answering Service (Voice Mail)


The Answering Service (Voice Mail) can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.

◎ You can record Answer Memo and Voice Memo up to 6 messages within 30 seconds.

Playing an Answer Memo

When there is a recorded Answer Memo

The message “Answer Memo” appear on the standby screen.

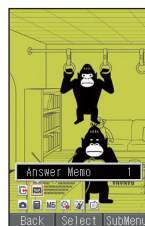

1

Select “Answer Memo,” and press (Select).


“Answer Memo List” appears.



2

Use to select the Answer Memo you want to hear, and then press (Play).

The Answer Memo plays back.

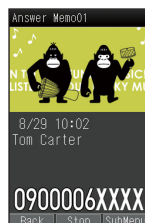


Info




 

 

 
 

 

To delete an Answer Memo, press while the standby screen is displayed. Select the Answer Memo you want to delete, press (SubMenu), and then (Delete). Next press (Delete One), and then press (YES).


Inputting Characters

Input characters using keypad keys  through , and .

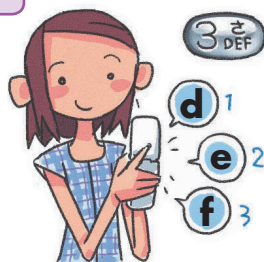The table below shows the characters each key cycles through when you press it.



Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
	.	@	-	_	/	:	~	1	
	a	b	c	A	B	C	2		
	d	e	f	D	E	F	3		
	g	h	i	G	H	I	4		
	j	k	l	J	K	L	5		
	m	n	o	M	N	O	6		
	p	q	r	s	P	Q	R	S	7
	t	u	v	T	U	V	8		
	w	x	y	z	W	X	Y	Z	9
	O Space ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { } ~								
	Switch between upper case and lower case of the entered alphabet character. Inputs (.,!?) when no character is entered.								
	Returns to the previous character (Back function) when entering characters. Inputs a line break after the entered character has been settled.								

- In order to input consecutive characters that are assigned to the same key, press  to move the cursor (highlighted), and then press the same key to input next character.

8 CAUTION

Allowable Characters in Your E-mail Address

Your e-mail address (the part at the left of “@”) can contain up to 30 characters, including single-byte English lower case letters, hyphens (-), periods (.) and underbars (_).

A period (.) or a zero (0) cannot be used as the first character.

Characters and symbols that are shaded in the above table cannot be used at the left of “@” in the address format “△△△@ezweb.ne.jp.”

Inputting an E-mail Address

Inputting “mark@ezweb.ne.jp”

In this example, we will input “mark@ezweb.ne.jp” for [E-mail Address1]. To input [E-mail Address1], perform steps 1 through 6 under “Registering an Address Book” (page 41), and then perform the following steps.



1

Input “mark.”

- To input “m”: Press **6** (MNO) once.
- To input “a”: Press **2** (ABC) once.
- To input “r”: Press **7** (PQRS) three times.
- To input “k”: Press **5** (JKL) twice.



2

 
Press **アプリ** (SubMenu), and then **3** (DEF) (Phrase).

Use *** 00**, **# 実行** and **アプリ** to scroll through the categories of phrases.




3

Use **↑↓** to select “@ezweb.ne.jp,” and then press **■** (Select).



Inputting Pictograms

The following procedure shows how to input pictograms into the body text when creating a new e-mail message.

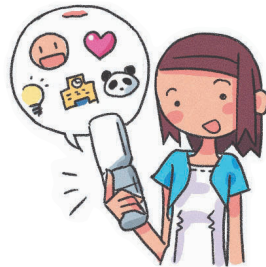

1

Press .

 
You can switch between Pictogram→
Symbol (Full-Size/Half-Size)→Face Mark
→Pictogram by pressing .



2

Use to select the pictogram you want, and then press (Select).

Use (Category) or to scroll through the various categories of pictograms. To input pictograms consecutively, press (Repeat) instead of (Select).




Address Book

Registering an Address Book




1

While the standby screen is displayed, hold down for at least one second.

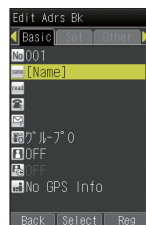

2

 
Select " [Name]," and then press (Select).



3

Enter the name, and then press (OK).

 The [Reading] is generated automatically when you enter a name.
To input text
→ "Inputting Characters" (page 38)



4


Use to select " [Phone No.1]," and then press (Select).



Continued on the next page


- 5** Enter the phone number, and then press (OK). Use to select the No. Type, and then press (Select).

When entering the number of a standard phone, be sure to include the area code.

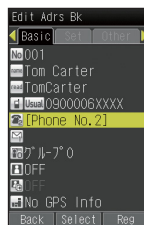


- 6** Use to select “ [E-mail Address1],” and then press (Select).

If you do not want to enter an e-mail address, jump to step 8.

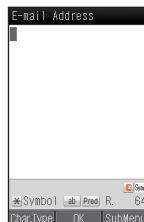

- 7** Enter the e-mail address, and then press (OK). Use to select the E-mail Type, and then press (Select).

To input an e-mail address
→“Inputting an E-mail Address” (page 39)

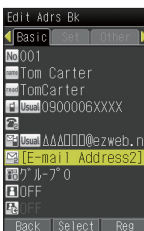

- 8** Press (Reg).



Info

- The Address Book can contain up to 1,000 records.
- Address book records are numbered from 000 through 999. A new record is automatically assigned to the lowest available unused record number.
- An address book record can also contain a group, image, street address, birthday, and other personal information.
- To delete an address book record, press while the standby screen is displayed. Use to select the address book you want to delete, press (SubMenu), and then (Delete). Next press (Delete One), and then press (YES).

Editing an Address Book Record



Example: To edit the phone number of “Tom Carter”


1

While the standby screen is displayed, press , use to select the record you want to edit.




2

Press (Detail), and then (Edit).

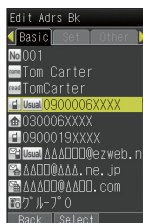


3

Use to select “Usual 0900006XXXX,” and then press (Select).

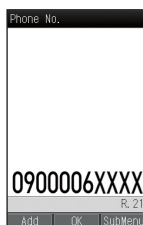

4

Make the changes you want, press (OK). Use to select the No. Type, and then press (Select).

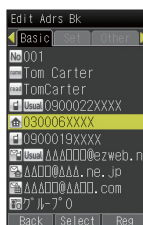


To delete characters, press .

5




Press (Reg). Use to select “Overwrite,” and then press (OK).

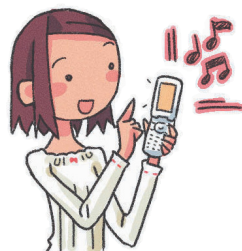


Adding Outgoing or Incoming History Data to the Address Book



 
1

While the standby screen is displayed, press , use  to select the phone number you want to register, and then press  (SubMenu).

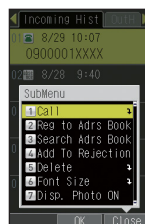



Incoming history submenu screen

: Displays outgoing histories.

: Displays incoming histories.

 2

Press  (Reg to Adrs Book).

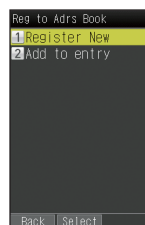




3

Press  (Register New).



4

Use  to select the No. Type, and then press  (Select).

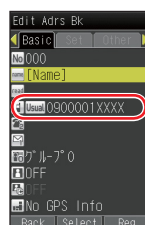



The phone number is entered automatically. To enter the name and other items, refer to step 2 under "Registering an Address Book" (page 41).

Dialing from the Address Book



1

While the standby screen is displayed, press , and then use  to select the record whose phone number you want to dial.





2

Press  (Detail).

The detail screen of the record appears.



3

Use  to select the phone number, and then press .



Pair Function

You can register up to five phone numbers (like frequently used ones from the address book).


You can make calls or send mails to these registered numbers (called Pair Partners) more easily.



Registering a Pair Partner

1 While the standby screen is displayed, press .

Use to select the 1 through 5 tab where you want to register the Pair Partner.

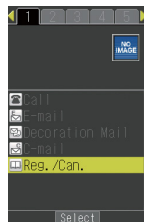

2 Use to select "Reg./Can.," and then press (Select). Press (YES).



3 Use to select the address book record for the person you want to register as a Pair Partner, and then press (Detail).



4 Press (Select).


When there is more than one phone number/e-mail address registered in the address book, the Pair Function phone number/e-mail address selection screen will appear.




Making a Phone Call or Sending Mail to a Pair Partner




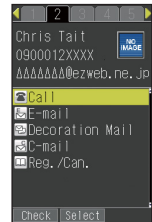
1

While the standby screen is displayed, press .

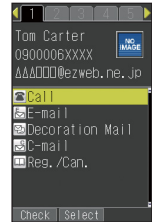



 
2


Use  to select the Pair Partner.




3

Use  to select “Call,” and then press  (Select).



Sending E-mail: Selecting “E-mail” and then pressing  (Select) will display a screen for composing and sending an e-mail message.

Sending C-mail: Selecting “C-mail” and then pressing  (Select) will display a screen for composing and sending a C-mail message.

For the subsequent procedure, see “Creating and Sending E-mail Messages” (page 50)/“Creating and Sending C-mail Messages” (page 56).

Info

In order to register a person as a Pair Partner, the person's name, phone number, and other information need to be registered in the address book beforehand. Use the procedure under “Registering an Address Book” (page 41) to create the required record before trying to register a person as a Pair Partner.



Your W62CA supports two types of mail:
e-mail and C-mail.

Using E-mail

To use e-mail, you need to subscribe to an EZweb service. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 24).

E-mail lets you exchange mails with a PC and with another cellphone that supports e-mail function.

You can send mail messages that contain up to 5,000 double-byte characters (10,000 single-byte characters), and you can attach photos to e-mail messages.

Page 50

- ※ You can send e-mail up to 30 recipients (includes To/Cc/Bcc, within 640 single-byte characters) at a time. When Adrs. Count Limit is set to "Restrict," you can send up to 5 recipients at a time (includes To/Cc/Bcc, within 640 single-byte characters).
- ※ You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- ※ The sending and receiving operations may take longer when a mail message has data attached.
- ※ Packet communication fee (varied by the sent/received data amount, regardless of the connection time) is charged to send/receive an e-mail.

Internet

Sent using an e-mail address.
Example: ΔΔΔ@ezweb.ne.jp

E-mail can be sent to
another au cellphone or
cellphone of other
manufacturer's.



E-mail can be sent to a PC.




Using C-mail

C-mail lets you exchange text messages that contain up to 50 double-byte characters (100 single-byte characters) with another au cellphone that supports C-mails.

▶ Page 56



※ C-mail transmission fee is charged when sending C-mail.

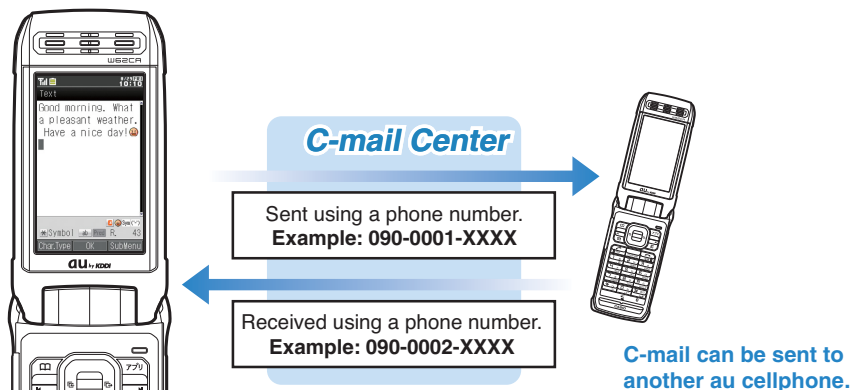

Mail

About C-mail Safety Block


 
- C-mail Safety Block blocks C-mails that contain accessing URLs (<http://△△△>, <https://△△△>) or phone numbers in its body text. C-mail Safety Block is set to on at the time of purchase. If you want to receive C-mails that contain accessing URLs or phone numbers in their body texts, you can disable this function to receive such C-mails.

Creating and Sending E-mail Messages




1

While the standby screen is displayed, press .

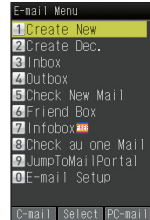

2

Press (Create New).
Select “To Address,” and
then press (Select).
Press (Select).

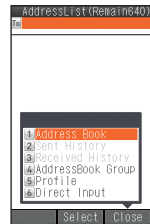


To: Address to which the e-mail will be sent.

You can send e-mail up to 30 recipients (includes To/Cc/Bcc, within 640 single-byte characters) at a time. When Adrs. Count Limit is set to “Restrict,” you can send up to 5 recipients at a time (includes To/Cc/Bcc, within 640 single-byte characters).

3


Press (Address Book), use to select an addressee, and then press (Detail).

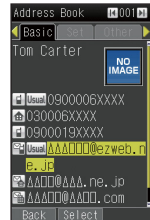

You can select an addressee from sent histories, received histories, address book group, profile, or you can enter an address.

4

 
Use to select the e-mail address you want to enter, and then press (Select). Press (OK).



5

Use to select “Sub” Subject,” and then press (Select).

 : Subject of the e-mail message.



6


 
Enter the subject, and then press (OK). Use to select “ Text,” and then press (Select).

: Body of the e-mail message.



7


Enter the body text, and then press (OK).

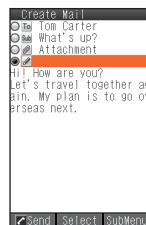

8

Press (Send) or (Back).

 
The message “E-mail Sending completed.” appears on the display after the e-mail message is sent.



Reading Received E-mail Messages




When you receive an e-mail


 
The message “E-mail” and  appear on the standby screen.

E-mail icon



1

Select “E-mail,” and then press  (Select).

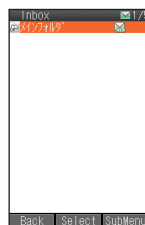



2



Press  (Select).

 
: Indicates an unread message.

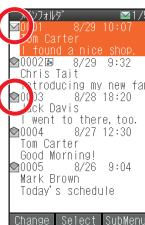: Indicates an already read message.



3

 
Use  to select the unread e-mail you want to view, and then press  (Select).



The received e-mail message appears.

 If all of the message cannot be displayed, press  to scroll.



Use  and  to scroll between messages.


 
Press  to return to the e-mail message list.

Reading an E-mail Message with an Attached Photo






1

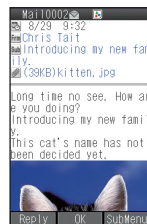Use  to select the e-mail message, and then press  (Select).





 
2

Use  to select the attached data, and then press  (Select).





 
3

Use  to select a file name, and then press  (Play).



Info

- Depending on the type of the attached data, the contents may be displayed at the last of the body text.
- Depending on the size of the attached data, it may not come in at the same time as the mail message. If this happens, use  in step 3 to select the file name, press  (Receive), and then press  (Play).
- The sending and receiving operations may take longer when a mail message has data attached.
- Certain signal conditions may also cause e-mail sending and receiving to take longer than normal.


Replying to a Received E-mail Message

 


To reply to an e-mail message, perform steps 1 through 3 under “Reading Received E-mail Messages” (page 52), and then perform the following steps.




1

Press  (Reply).


 (Subject) is prefixed with “Re:,” and the body text of the e-mail is quoted.



2

Use  to select “ Text,” and then press  (Select).

 
For the remainder of this procedure
→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages” (page 50).



Avoiding Spam

It is recommended that you use our mail filter function to block spam.

You can use the “Supportive settings” to easily configure mail filter settings by answering questions that appear on the display.

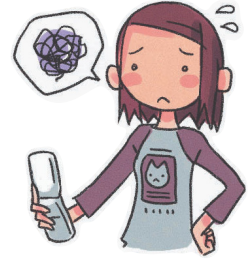


■ Configuring Mail Filter Settings

Example: To access the “サポート設定” (Supportive settings)


- ① While the standby screen is displayed, press .
- ② Press (E-mail Setup) → (Mail Filter).
- ③ Use to select “次へ” (Next) and then press (Select).
- ④ Enter your Security Code, press (OK).
- Use to select “送信” (Send) and then press (Select).
- ⑤ Use to select the item and then press (Select).

Next, follow the instructions that appear on the display.

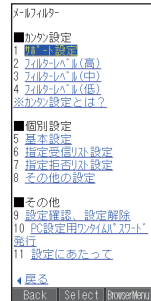


■ “カンタン設定” (Simple Settings)

“サポート設定” (Supportive settings)	You can choose filtering options by answering our questions. It is recommendable for those who want to check the filtering conditions one by one.
“フィルターレベル(高)” (Filter level (Strict))	You can block all the mails from PC. It is recommendable for those who use only cellphones to send e-mails.
“フィルターレベル(中)” (Filter level (Medium))	You can block the e-mails from specified addresses in addition to the e-mails containing “未承諾広告※” (unsolicited advertisement) in their titles and “なりすましメール” (spoof e-mail). It is recommendable for those who are bothered by specified spam senders.
“フィルターレベル(低)” (Filter level (Normal))	You can block the e-mails containing “未承諾広告※” (unsolicited advertisement) in their titles, and “なりすましメール” (spoof e-mail). It is recommendable for all e-mail users.

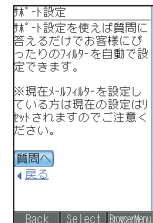


 
You can prevent spam by changing your e-mail address. See “Changing Your E-mail Address” (page 26) for information about how to change your e-mail address.

Creating and Sending C-mail Messages

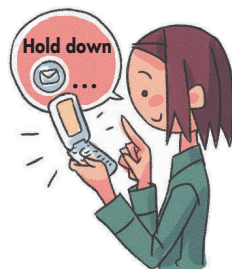

1

While the standby screen is displayed, hold down  for at least one second.




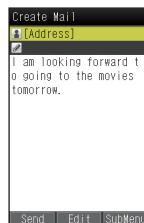
2

Press  (Create New).




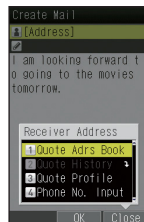
 
3

Enter the body text, and then press  (OK).

 




4


Select “ [Address],” and then press  (Edit).





5



Press  (Quote Adrs Book), use  to select an addressee, and then press .

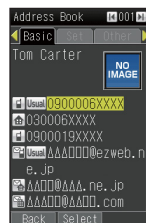You can also select a phone number from sent histories or received histories, or you can enter an address.



6

 Use  to select the phone number you want to enter, and then press .

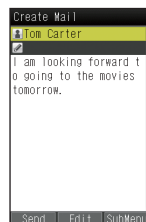

7


Press  (Send) or .

When the C-mail reaches the other party, the message "Mail delivered" appears, and the message is stored in the Outbox.




Reading Received C-mail Messages


When you receive a C-mail



The message “C-mail” and  appear on the standby screen.

C-mail icon

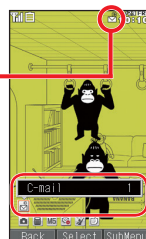

1

 Select “C-mail,” and then press  (Select).

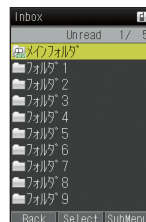



2



Press  (Select).

 : Indicates an unread message.

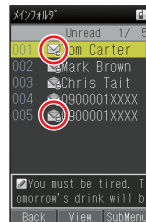

: Indicates an already read message.

 



3

Use  to select the unread C-mail you want to view, and then press  (View).

The received C-mail message appears.

Use  and  to scroll between messages.

 Press  to return to the C-mail message list.



Camera

The W62CA has a CMOS camera with approximately 1.97 million effective pixels and powerful functions to support various types of digital imaging. You can attach the photos that you shot to e-mail messages.

Using the Camera

Shooting a Photo (page 61)

1

Use your images for W62CA functions!

You can use photos you shot for the standby screen, for the image that appears when receiving a call, and in your address book.




2

Send images by e-mail!

Within 500KB, you can send a photo as an e-mail attachment.


- ※ Certain signal conditions may cause e-mail sending and receiving to take longer than normal.

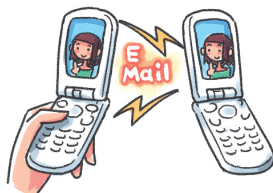

Tips for Better Photos

Shooting with W62CA open

Do not cover the lens or optical sensor with your hands. Hold the camera securely with both hands.

Use your thumb to press  (Shoot) to release the shutter.



Tips for Avoiding Hand Movement

- Remain steady by keeping your arms lightly against your sides and standing with your feet about shoulder width apart. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is especially important when shooting photos where lighting is dim.
- A self-timer is also provided for shooting photos. With the self-timer, you do not need to press the shutter button to shoot a photo, so there is less chance of a blurred image caused by accidental movement of the phone.

Auto Focus

W62CA has built-in auto focus function. You can shoot photos with the subject properly focused simply by pressing the shutter key.

Photo Sizes

The following shows the sizes of the photos that can be recorded with your W62CA.

Photo Sizes	Where to Store
W.paper (Normal) 240×320	"Photo Folder" in W62CA's Data Folder
W.paper (Wide) 240×400	
0.3M 640×480	"DSC Folder" in microSD™ memory card
1M 1280×960	
1.5M (Wide) 1600×960	
2M 1600×1200	




 
※ At the time of purchase, Photo (W.paper Mode) is set to "W.paper (Wide)" and Photo (DSC Mode) is set to "2M."

※ Photos are stored in Data Folder when a microSD™ memory card is not inserted irrespective of the photo size.

Shooting a Photo





1

 
While the standby screen is displayed, press , use  to select “Camera,” and press  (Select). Press  (Photo (W.paper Mode)).



2

Point the lens at the subject, and press  (Shoot).

The phone emits a shutter sound.
Note that the phone emits the shutter sound even if it is in Manner Mode.
Check the subject through the monitor screen (within the area indicated as , and release the shutter.




Camera

3


Press  (Save).

 The photo you shot is stored in the “Photo Folder” in the Data Folder, and then returns to the photo monitor screen.






Info

 
When shot mistakenly



If the photo is not what you want to take, press  in step 3. Next, repeat step 2 to redo.

 Viewing Photos







- 1 While the standby screen is displayed, press , use  to select "Data Folder," and then press  (Select).




 
- 2 Use  to select "Photo Folder," and then press  (Select).

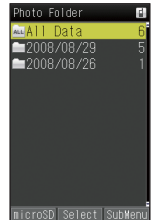

Selecting "All Data" displays a list of all photos in the "Photo Folder."



 
- 3 Use  to select the folder, and then press  (Select).

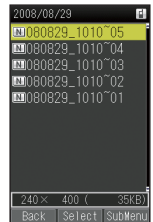A list of all photos that were shot on that day are displayed.



 - 4 Use  to select the photo you want to view, and then press  (Select).


 
The photo is displayed.



Attaching a Photo to an E-mail Message

Perform the procedure from step 1 to 2 under “Shooting a Photo” (page 61), and then perform the following steps.

1

Press  (E-mail), and then press  (E-mail).

The photo you shot is stored in the “Photo Folder” in the Data Folder.




2

Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages” (page 50) to create an e-mail message.

Info

You can attach any photo you have shot to an E-mail, but data over 500KB cannot be sent.

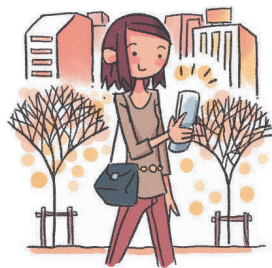


Using EZweb

To use EZweb, you need to subscribe to an EZweb beforehand. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you you can use EZweb. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).

EZweb is an information service for simple Internet access from your phone. EZweb lets you search for information on the Web, and provides you with access to Chaku-Uta®, the latest news, and other web-based contents (information sites).



※ Packet communication fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.

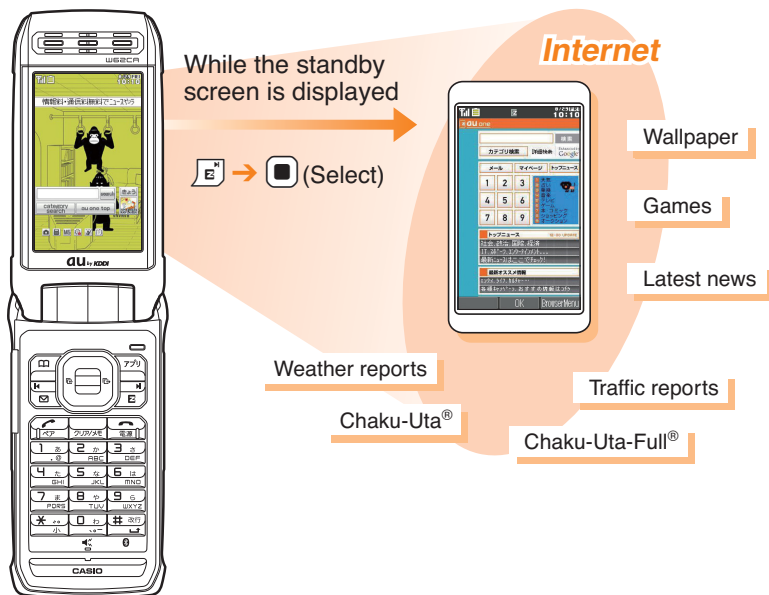

Displaying the au one Top

1

While the standby screen is displayed, press , use to select “EZweb,” and then press (au one Top).

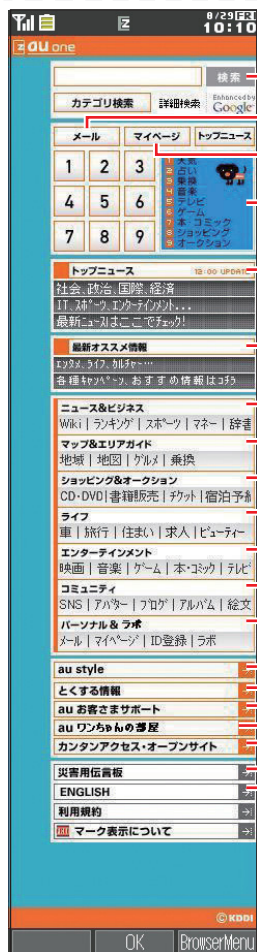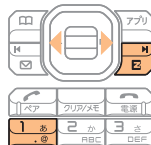

1	キーワード検索機能 (Search by keyword) Provides information search function by keywords
2	メール (Mail) Provides another e-mail address for both cellphone and PC use
3	マイページ (My Page) Provides various information, useful tools or mass storage capabilities to suit your needs
4	リモコン形式での直接アクセス (Provides direct access via remote control) ①Weather ②Fortune-telling ③Transfer ④Music ⑤TV programs ⑥Games ⑦Books & Comics ⑧Shopping ⑨Auction
5	トップニュース (Top News) Provides the automatically-updated latest top news
6	最新オススメ情報 (What's Hot) Introduces various EZweb features and content information
7	ニュース&ビジネス (News & Business) Provides the latest information such as news, weather, and other information beneficial for business
8	マップ&エリアガイド (Map & Regional information) Provides regional information such as transit and map search
9	ショッピング&オークション (Shopping & Auctions) Provides information about where you can purchase goods with your cellphone, and information about how to use net auctions to buy and sell goods
10	ライフ (Daily life) Provides useful information for daily life
11	エンターテインメント (Entertainment) Provides the latest information about games, music, e-books, and information about hobby and entertainment trends
12	コミュニティ (Community) Provides the useful, amusing information that make you feel like using such as SNS, blog
13	パーソナル&ラボ (Personal & Laboratory) Provides another e-mail address, information and tools to suit your needs, ID registration for convenient use of au one services
14	au style Introduces au-recommended information and sites
15	とくする情報 (Valuable Information) Provides gifts and useful information exclusively for EZweb service subscribers for free
16	auお客さまサポート (au Customer Support) Provides phone bills, procedures, au information, and au on-line manuals
17	auワンちゃんの部屋 (au ワンちゃん's room) Introduces you to the au ワンちゃん mascot
18	カンタンアクセス・オープンサイト (Simple Access & Open Site) Introduces Simple Access and Open Site
19	災害用伝言板 (Disaster Message Board) Registers/checks the safety information in disasters
20	ENGLISH Introduces English sites


8 CAUTION


- ◎ The layout and contents of the EZweb screens shown here are for example purposes only.
- ◎ Some sites may charge you for the content in addition to transmission charges.

Bookmarking Sites You Frequently Access



1

Display a site you want to bookmark, and press  (BrowserMenu).

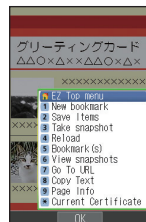

2

Press  (New bookmark).

※ You may not be able to bookmark some sites.



3

Press  (Reg).

The message “Registered to Bookmark” appears when registration is completed.



 
Info

You can store up to 100 sites in the Bookmark(s).

Viewing a Bookmarked Site




- 1 While the standby screen is displayed, press .



- 2 Use to select "EZweb," and then press (Bookmark(s)).



 - 3 Use to select a site or folder, and then press (Connect/Select).





If you selected a folder, use to select a site, and then press (Connect).

Checking Charges


You can check call and transmission charges.

- 1 While the standby screen is displayed, press .

  When the EZweb connection confirmation screen appears, press (YES).

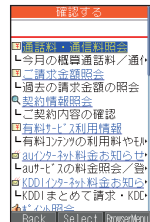



- 2 Use to select the item you want to check, and then press (Select).


 




Downloading Chaku-Uta®/ Chaku-Uta-Full®





To download a Chaku-Uta®/Chaku-Uta-Full®, perform step 1 under “Displaying the au one Top” (page 65), and then perform the following steps.

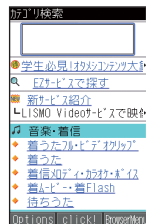- 1 Use  to select “カテゴリ検索” (Search by Category), and then press  (OK).



 - 2 Use  to select “着うたフル・ビデオクリップ” (Chaku-Uta-Full® and Video Clip) or “着うた” (Chaku-Uta®), and then press  (Select).

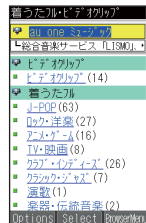

- 3 Select the content (desired information site), and download it.

In order to use fee-based contents, you need to enter your EZ Password or Premium EZ Password.




Initial Value: Any 4-digit number you entered on your subscription contract.

Input the required password according to the instructions that appear on the display. To download information, follow the instructions that appear on the display. Downloaded data is stored in the Data Folder.

CAUTION

In addition to transmission charges, you will be charged according to the pricing policy of each site to download Chaku-Uta®/Chaku-Uta-Full® and other contents from a fee-based site.

Info

- ◎ Perform the same procedure to download wallpaper and use it for the standby screen background.
- ◎ You also can access an information site where you can download Chaku-Uta-Full® by pressing  while the standby screen is displayed, using  to select “LISMO,” and then pressing  (Jump to au one Music).


EZ News Flash/au one Gadget

EZweb subscription required


EZ News Flash displays a scrolling ticker showing the latest news on the standby screen, and you can view information by selecting it. au one Gadget displays an application called gadget on the standby screen. EZ News Flash/au one Gadget is available just after making initial settings for EZweb (page 24). All EZ News Flash information is distributed for no charge.

- ※ When updating EZ News Flash by manual operation or connecting to EZweb site, packet communication fee may be required. If packet communication fee is required, confirmation screen appears.
- ※ When the gadget you are using needs update via network connection, packet communication fee is required when updating.
- ※ Gadgets for C-mail and Photo slide show are available without EZweb subscription.

EZ News Flash/au one Gadget Features

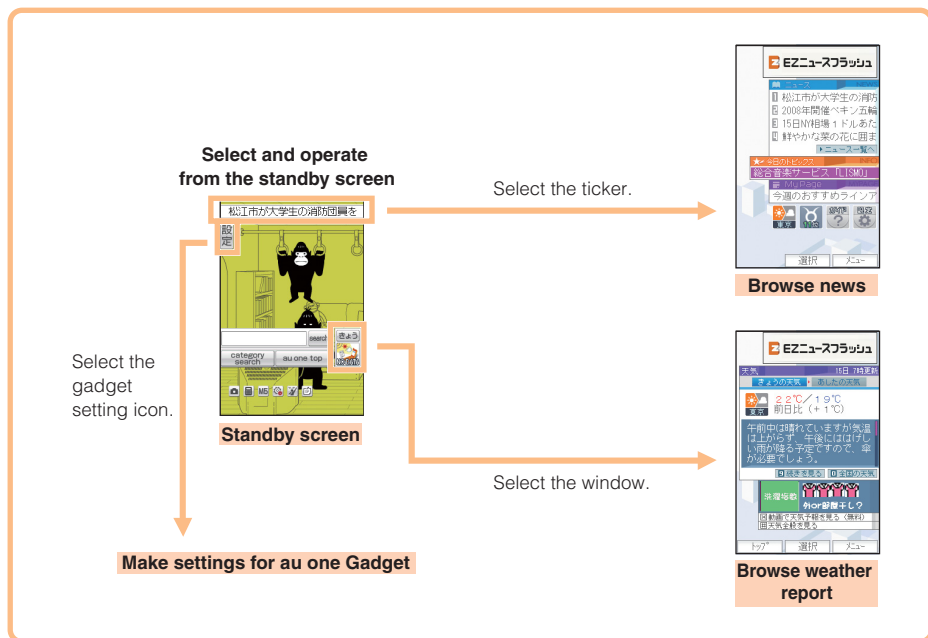



Info


 
- ◎ The information is updated in regular time intervals.  appears while receiving information.
- ◎ If you are using au one My Page, you can confirm the updated contents by selecting "My Page" from the top page of EZ News Flash.

Setting EZ News Flash service





You can use EZ News Flash with simple settings for no charge. Refer to “Initializing E-mail and EZweb” (page 24), complete initializing, and then make settings for EZ News Flash.

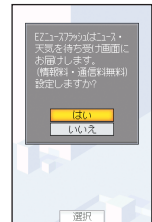

1

Press  in the standby screen, select the ticker and press  (OK).



2

 Press  to select “はい” (Yes), press  (選択)(Select), Press  to select “OK,” and press  (Select).

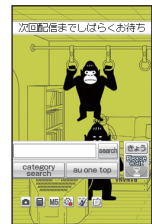
 
 




Setup is complete.

When you complete setup and return to the standby screen, the message “次回配信までしばらくお待ち下さい。” (Please wait a while for the next distribution), will be displayed on the ticker.








Turning EZ News Flash off

To turn off EZ News Flash, operate the following directions:

- ① While the standby screen is displayed, press , select the ticker and press  (News).
- ② Press  (メニュー)(Menu), use  to select “サービス設定解除” (Service termination), and press  (選択)(Select).
- ③ Follow the instructions on the screen and turn off the setting.
The setting is turned off, and news distribution will stop.

Changing settings of receiving notifications

You can change the settings of the tone, vibrator, and LED indicator which notifies EZ News Flash distribution.

- ① While the standby screen is displayed, press       .
- ② Set each item.

If you do not need notifications when receiving EZ News Flash, set the item to “OFF.”

EZ Navi Features

EZ Navi uses global positioning system (GPS) information to provide you with useful information.




Standby screen

Press .



EZweb menu

Use to select "EZnavi."

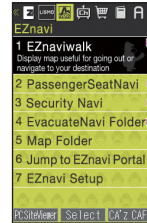

EZ Navi menu

Checking your route: Passenger Seat Navi



Passenger Seat Navi makes it possible for the passenger (non-driver) in a motor vehicle to check route information to a destination using both voice and map guides.



When you check where your child is: Security Navi

"Security Navi" application is composed of following three functions: "いつでも位置確認" (Auto Position Search) (paid), "エリア通知" (Area Message) (free), and "位置確認メール" (Position Search Mail) (free).

These functions enable you to check the location of an au cellphone supporting "Security Navi" and receive an alert mail which is sent to a particular au phone whenever another phone enters (or is inside of) or exits (or is outside of) a preset area by operating W62CA.

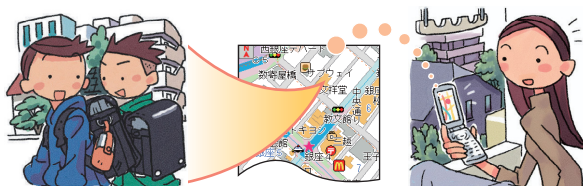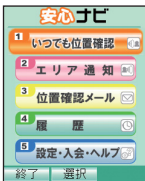

EZ Navi Walk

A menu of useful options you can use while you are out.



ナビをする* (Navigation)	Searchable source of a route guidance (voice navigation) to your destination, shops, and facilities
地図を見る (free)* (View Map)	You can view a map of your current location or any other location.
乗換検索する (free ⁽¹⁾)* (Search Connection)	Searchable source of train transfer and timetable information
道路情報を見る (View Traffic Info)	Check real-time traffic information on the major roads all over Japan.
もっとナビウォーク (EZ Navi Walk)	Provides information on settings and PC cooperative service.
インフォメーション (Information)	You can register for memberships or make inquiries.

The star symbol shows that you can use your voice to enter search terms. This is called “voice input” function.


※1 You are charged a fee for some services.

Positioning Present Location



Your initial location is indicated by ★. Changes in your location are indicated in real time by 人.

3D Navi

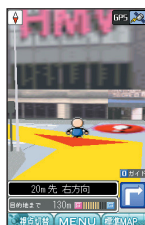

The display is switched to the 3D image at the guidance point or a point near the destination.

Navigation engine by NAVITIME JAPAN
Map: Shobunsha Publications, Inc./
Sumitomo Electric Industries, Ltd.
3D data: ZENRIN CO., LTD./GEO
Technical Laboratory Co., Ltd.
Z06A-No.2137

Evacuate Navi



**Evacuate Area
Map**



**Route Home
Map**

Map: Shobunsha Publications, Inc.
Preparation: Asia Air Survey Co., Ltd.

You can use the map data stored in the Data Folder of the W62CA to locate the nearest refuge shelter or to determine the direction to your home (避難所マップ (Evacuate Area Map)). You also can access the Evacuate Navi EZweb site to download contents, including the recommended route between two points, such as from your place of work to your home (Office to Home), “帰宅支援マップ” (Route Home Map), etc.

※ In order to have it indicate your direction home, you will have to pre-register the GPS information of your home in the au phone address book.

※ Some contents may require payment.


Info


 
- ◎ All display information is intended for reference purposes only. Be sure to follow all instructions issued by police, fire department personnel, government officials, etc.
- ◎ Due to GPS satellite conditions and other factors, it may take some time for Evacuate Navi to indicate your current location.
- ◎ The display layout and contents shown here are for example purposes only.
- ◎ Depending on the number of records stored in your address book, it may take some time for map viewer to start up.
- ◎ To use EZ Navi services, packet communication fee is charged. Also, to use some of the services, information fee is charged in addition to the packet communication fee.

au Media Tuner makes it possible to enjoy using Television (1Seg) and EZ Channel-Plus.

au Media Tuner Features

With au Media Tuner, you can switch between television operation screen/data operation screen and enjoy Television (1Seg) of terrestrial digital audio broadcasts.

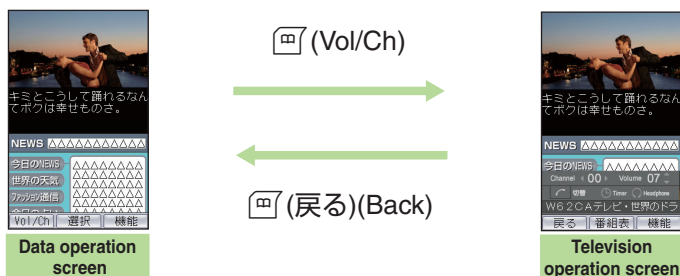

※ By switching the channel using  and , registered EZ Channel-Plus programs will be displayed.

Television (1Seg)

There are two types of digital TV broadcasting: the terrestrial digital television programs you view on your home television and the 1Seg, which is the name of a broadcasting service for cellphones. Television (1Seg) lets you view 1Seg broadcasts.


Terrestrial digital television is broadcast using the same UHF band radio waves as terrestrial analog broadcasts.

EZ Channel-Plus


You can use au Media Tuner to play back programs registered with EZ Channel-Plus/EZ Channel.

Using the built-in TV antenna

When viewing with Television (1Seg), take care to avoid covering the built-in TV antenna with your hand in order to ensure proper reception.

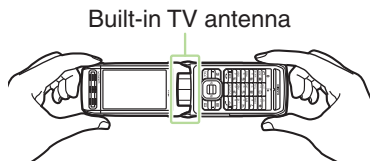

Info

- You need to perform an initialization procedure before you can use au Media Tuner. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).
- No call charge or packet communication fees are charged for using au Media Tuner.
- No call charge or packet communication fees are charged for watching data broadcasting programs. However, you will be charged for packet communication if you use the interactive service provided by data broadcasting programs or access to the information site on EZweb.
- You will not be able to view au Media Tuner broadcasts after changing models or on a W62CA whose contract has been cancelled. You can use au Media Tuner to play back programs stored in your Data Folder even after changing models or canceling your contract.
- When remaining battery level shows  during au Media Tuner is active, a message (indicating the battery will soon be discharged) appears, and au Media Tuner automatically stops.
- The following shows the approximate Television (1Seg) continuous viewing time^{※1} with the W62CA.

Earphone	Time with DBEX On: 5 hours, 10 minutes Time with DBEX Off: 5 hours, 20 minutes
Speaker	Time with DBEX On: 5 hours, 00 minutes Time with DBEX Off: 5 hours, 00 minutes

※1 Time measured under the conditions below. Actual continuous viewing time may vary depending on data broadcast operations, etc.


Display: Full-screen; Earphone Volume: 10; Caption: Off; Brightness: 3.

- The W62CA may fail to receive radio signals properly depending on the location or radio wave receiving conditions. In this case, the quality of the picture or the sound may be lower than usual or not available.
- The display layout and contents shown here are for example purposes only.
- For details on “1Seg” service, visit the website below.
The Association for Promotion of Digital Broadcasting (DPA):
<http://www.dpa.or.jp/> (For PC)
<http://www.dpa.or.jp/1seg/k/> (For Cellphones)

Configuring au Media Tuner Initial Settings


 
Perform the following procedure before using au Media Tuner for the first time.

1




While the standby screen is displayed, hold down  for at least one second.

Escape clause is displayed.

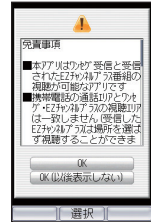

If you select “OK (以後表示しない)” (OK (Do not display again.)), the display will not appear in the future.





2

 Use  to scroll the screen to read its contents. After you do, use  to select “OK” and then press  (選択) (Select).

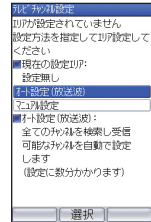A screen for configuring au Media Tuner initial settings will appear. Follow the instructions on the screen to configure the settings. After you finish the channel setting screen will appear.

 


3

Use  to select “オート設定(放送波)” (Auto Setting) and then press  (選択) (Select).

This automatically configures reception area and channel settings, and displays the television screen.


If you want to configure area settings manually, select “マニュアル設定” (Set Manually).




Info

- ◎ You may run into problems when configuring channel settings in step 3 in areas where 1Seg terrestrial digital television broadcast for cellphone/mobile service has just started.
- ◎ Whenever you start up au Media Tuner, the channel you were viewing the last time you used it will appear first. If you move to a different viewing area and are unable to receive the currently configured channels, reconfigure channel settings.

Using Television (1Seg)

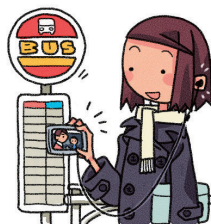


1



While the standby screen is displayed, hold down  for at least one second.



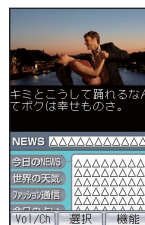

You need to perform an initialization procedure before you can use au Media Tuner. If you have not performed initialization yet, refer to “Configuring au Media Tuner Initial Settings” (page 77).



When you start up au Media Tuner after configuring initial settings, the channel of the mode you were viewing the last time you used will appear.



2



Use  and  to change the channel.

Use  in television operation screen and    in data operation screen to adjust the volume.








With EZ Channel-Plus, you can select a program with  and then press  (再生) (Play) to start playback.



Info

- When you start up au Media Tuner, it may take some time to acquire images and, especially in the case of a data broadcast, data. This is due to the characteristics of digital broadcasts.
- In any mode, pressing  while the final channel is displayed or  while the first channel is displayed will switch mode.

To switch between the earphone and speaker




- ① On the television operation screen/data operation screen while au Media Tuner is running, press  (機能) (Function).
- ② Use  to select “音声設定” (Sound Settings) and then press  (選択) (Select).
- ③ Use  to select “出力先” (Sound Output Settings) and then press  (選択) (Select).
- ④ Use  to select “オート” (Auto), “スピーカー” (Speaker), or “イヤホン” (Earphone), and then press  (設定) (Set).

Info

The initial setting is “オート” (Auto).

Exiting au Media Tuner

 
1

Press , use  to select “はい” (Yes), and then press  (OK).




Other Functions

Security Setup Features

With Security Setup, you can make a phone call to preregistered numbers or use high-volume buzzer just by holding down  for at least one second.

 Safety Buzzer

You can use W62CA as high-volume emergency buzzer by holding down  for at least one second while the standby screen is displayed.



■ To turn on Safety Buzzer

While the standby screen is displayed, press


   , input the lock No., and then press  (OK).

■ To stop Safety Buzzer

To stop Safety Buzzer, input the lock No., and then press  (OK).


※ You cannot turn off W62CA or perform any other operation while the Safety Buzzer is sounding. The Safety Buzzer will continue to sound until you input the lock No. or the battery fully discharges.

Hot Dial

With HOT DIAL, holding down  for at least one second will dial a preset phone number.

■ To turn on HOT DIAL

While the standby screen is displayed, press    , input the lock No., and then press .

Next, input the phone number you want to preset, and then press  (OK).

Info

- ◎The Safety Buzzer will sound through the W62CA's speaker even when the Casio round-type earphone jack conversion adapter 03 and the SONY MDR-E0921, flat-type switched earphone microphone (option), or flat-type stereo earphones microphone (option) is connected.
- ◎Even when Manner Mode is on, Safety Buzzer sounds.

In addition to the functions covered in this Basic Manual, your W62CA also has the following features.

Global Passport GSM

W62CA supports Global Passport GSM based on au IC-Card.

Global Passport GSM is an international roaming service for the customers to use the phone replacing its au IC-Card with GSM cellphone for overseas use. No special application procedure or daily/monthly fee are needed, and the call charge is added up to domestic call, so the pay procedure is simple.

LISMO

You can use LISMO Player to enjoy a Chaku-Uta-Full® or your favorite CD tracks. Also, you can download a Chaku-Uta-Full® or purchase CD tracks by accessing “au one Music.”

PC Site Viewer

You can view WEB sites created for PCs.

Bar Code Reader & Maker

You can use the camera to read QR codes and bar codes. Also, you can create your own bar codes directly from your address book entries.

Touch Message

Send and receive message, address book, Data Folder data between devices which supports EZ FeliCa function.

Infrared Communication

You can exchange the data stored in your Address Book, Schedule, Bookmarks, or Data Folder between devices supporting infrared communication.

EZ Apps (BREW®)

Enjoy downloaded games and other software.

Earthquake Early Warning

Provides Earthquake Early Warning to au phones at once which are in the surrounding area of the seismic center. The information is distributed by the Japan Meteorological Agency.





 









Electronic Compass

A built-in digital compass automatically rotates the EZ Navi Walk map to make the direction you face always becomes upwards. In G'zGEAR, you can display the direction and azimuth angle.

Sports Timer

You can measure the length of a game, interval time, LAP/SPLIT time.

 Troubleshooting

Symptom	What to check	What to do	Page
The phone does not turn on.	Is the battery pack installed correctly?	Correctly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.*	P.12
	Are you holding down  for at least 2.5 seconds?	Hold down  for at least 2.5 seconds to turn on the phone.	P.14
I can't make calls.	Is  (Out of Range) on the display?	Wait until you are in a location where  is not displayed before trying to make a call.	P.14
	Are you including the area code?	When making a call to a standard phone, you need to input the area code, and then the phone number.	P.28
	Is the phone turned on?	Hold down  for at least 2.5 seconds to turn on the phone.	P.14
	Did you press  ?	After inputting the phone number, press  to dial it.	P.28
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
I can't receive calls.	Is  (Out of Range) on the display?	Move to a location where  is not on the display.	P.14
	Is the phone turned on?	Hold down  for at least 2.5 seconds to turn on the phone.	P.14
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
Nothing happens when I press the keys.	Is the phone turned on?	Hold down  for at least 2.5 seconds to turn on the phone.	P.14
The phone emits a warning tone, and then turns off.	Is battery pack power low?	Charge the battery pack.	P.12
The phone answers calls automatically.	Is Answer Memo turned on?	Hold down  for at least one second to turn off Answer Memo.	P.36
	Is Drive Mode turned on?	Hold down  for at least one second to turn off Drive Mode.	P.4
I can't hear the caller.	Is the earpiece volume level too low?	During a call, press  to increase earpiece volume.	P.35
	Is the earpiece covered with your ear?	Make sure to place the earpiece to the center of your ear.	—

※ If the battery level is very low, "Now Loading..." is shown on the display, and after a while display disappears.

If you lose your W62CA

Setting Remote Ctrl Lock makes it possible to perform a remote operation that activates Auto Lock, FeliCa Lock and Address Book Lock to lock the W62CA. This helps to avoid unauthorized use of your phone and its features.

■ Configuring operating environment settings for Remote Ctrl Lock

Repeatedly calling the W62CA from a pre-registered telephone number a specified number of times within a specified amount of time will activate Auto Lock, FeliCa Lock and Address Book Lock.


1

While the standby screen is displayed, press , input the lock No., and then press (OK).



2

Press (Valid No.), use to select “Register New,” and press (Select). Enter the phone number and press (Comp).

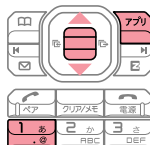


You can enter the phone number by selecting from the address book, outgoing histories, incoming histories, sent histories, received histories, memo, profile, payphone. Otherwise, you can enter the number directly.

You can register up to 3 phone numbers.

3

Press (Duration (min)), input the period you want to specify, and then press (Set).

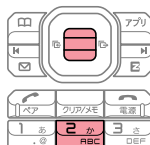


You can set the time period (the time intervals from the first call to the last call you should make to activate Remote Ctrl Lock).

You can set the time period between 1 to 10 minutes.

4

Press **3 DEF** (No. of Incm), input the number of calls you want to specify, and then press **■** (Set).

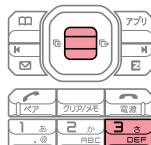

You can set how many times you should repeat making a call to activate Remote Ctrl Lock. You can set it from 3 to 10 times.

5

Press **アプリ** (Save).



■ Using remote operation to lock the W62CA with Auto Lock, FeliCa Lock, and Address Book Lock

1

After using the procedure under “Configuring operating environment settings for Remote Ctrl Lock” (page 85) to register the calling phone number, place the specified number of consecutive calls from the registered phone number to the W62CA within the specified amount of time.

You will hear the announcement “遠隔ロックに設定しました” (Remote Ctrl Lock activated), and the W62CA will be locked using Auto Lock, FeliCa Lock and Address Book Lock.

! CAUTION

- ◎ Remote Ctrl Lock cannot be activated if the W62CA is not turned on or if it is outside its service area, or when “ON” is selected for “Emission OFF (M52).” Also, you may not be able to activate Remote Ctrl Lock while the W62CA is in an area where the signal is weak.
- ◎ The initial setting for the “Unlock by Phone” of “Rem. Ctrl Lock (M414)” is “Invalid.” When “Invalid” is selected, the unlock screen is not displayed while Remote Ctrl Lock is activated, and Remote Ctrl Lock cannot be unlocked by W62CA operation. When “Valid” is selected, pressing any key while Remote Ctrl Lock is activated displays an unlock screen. Entering the proper lock No. will deactivate Remote Ctrl Lock and unlock the phone.
- ◎ The initial setting for the “Erase Data” of “Rem. Ctrl Lock (M414)” is “Not Erase.” When “Erase” is selected, activating Remote Ctrl Lock will perform “Memory Reset (M453)” and delete all data in the phone memory.


■ Using the Security Lock Service to activate Remote Ctrl Lock

With the Security Lock Service, you can activate Auto Lock, FeliCa Lock and Address Book Lock remotely by placing a call to an au Customer Service Center or with your computer even if Remote Ctrl Lock is not set beforehand. The Security Lock Service is free.

Using the Security Lock Service

● Calling an au Customer Service Center to activate or deactivate Remote Ctrl Lock

On an au phone, dial 113 (free).

From cellphone of other manufacturer's or a standard phone, dial the following toll-free number:  0077-7-113 (free).

- This service is available 24 hours per day.
- Follow the procedure in accordance with the voice guidance that is played.

● Using a computer to activate or deactivate Remote Ctrl Lock

On the Internet, go to “auお客さまサポート” (au Customer Support) (<http://cs.kddi.com/>) and log in, and then follow the instructions that appear on the screen.

※Registration is required the first time you use this service. You can register even after you lose your phone.

※MyKDDI has changed its name to “auお客さまサポート” (au Customer Support) in spring 2008. The procedures for using this service remain unchanged.

Index

A

Address Book	41
Adding outgoing or incoming history data to the address book	44
Deleting	42
Dialing from the address book.....	45
Editing.....	43
Registering	41
Adjusting the earpiece volume	35
Adjusting the ringtone volume	34
Answering a call	30
Answer Memo	36
Deleting	37
Playback	37
Turning on.....	36
au IC-Card	11
au Media Tuner	75
Configuring initial settings.....	77
Exiting.....	81
Using Television (1Seg)	79
au one Gadget	70

B

Battery level	14
Battery pack	10, 11

C

C-mail Safety Block	49
Caller ID	28
Camera	59
Shooting a photo	61
Viewing photos	62
Casio round-type earphone jack conversion adaptor 03	10
Casio USB cable 03 (MiniB)	10
Cellphone Etiquette	1
Chaku-Uta®/Chaku-Uta-Full®, Downloading	68
Changing the ringtone	32
Charging the battery pack	12
Checking Charges	67
C-mail	49
Creating and sending	56
Reading	58

D

Desktop holder	10, 12
Disaster Message Board Service	6
Display indicators	19
Display language	16
Drive Mode	4

E

Earpiece volume	35
E-mail	48
Avoiding spam	55
Changing your e-mail address.....	26
Creating and sending	50
Initializing e-mail	24
Looking up your e-mail address	25
Reading	52
Reading an e-mail message with an attached photo	53
Replying.....	54
EZ Channel-Plus	75
EZ Navi	72
EZ Navi Walk	73
EZ News Flash	70
Settings.....	71
EZweb	64
au one Top.....	65
Bookmarking sites	66
Downloading Chaku-Uta®/ Chaku-Uta-Full®	68
EZ Password	15, 68
Initial settings.....	24
Viewing a bookmarked site.....	67

H

Hot Dial	82
-----------------------	----

I

Incoming histories	31
Initial settings (e-mail and EZweb) ..	24
Initial values	14
Inputting characters	38
Inputting an e-mail address	39
Inputting pictograms	40
International call	29

K

Key functions	18
----------------------------	----

L

Looking up your phone number 25

M

Mail 48
 C-mail 49
 E-mail 48
 Mail filter 5, 55
 Main menu 20
 Making a call 28
 Making an international call 29
 Manner Mode 35
 microSD™ memory card 11, 19
 Missed call notification 30

N

Names of parts 11

O

One-ring Calls 5, 31
 Operation basics 18
 Outgoing histories 31

P

Pair Function 46
 Making a phone call 47
 Registering a pair partner 46
 Sending mail 47
 Phone call 28
 Photo
 Sending a photo by e-mail 63
 Shooting a photo 61
 Viewing photos 62

R

Redialing (outgoing/incoming
 histories) 31
 Remote Ctrl Lock 85

S

Safety Buzzer 82
 Security Code 15
 Security Lock Service 87
 Security Setup 82
 Hot Dial 82
 Safety Buzzer 82
 Signal strength 14

Soft keys 23
 SONY MDR-E0921 10
 Spam 5, 55
 Standby screen 14, 19
 Submenus 23

T

Television (1Seg) 75
 Troubleshooting 84
 Turning on power 14

U

Unsolicited advertisement 5, 55

V

Vibrating 35

For inquiries, call:
au Customer Service Center

From EZweb site:

How to access

EZ→au one Top→auお客さまサポート
(au Customer Support)
→お問い合わせ (Inquiries)



※Menu structure is subject to change without notice.

General Information, Rate Information

From regular phones:

 **0077-7-111**
(toll free)

From au cellphones:

157 area code not required
(toll free)

In case of loss, theft, or malfunction...

From regular phones:

 **0077-7-113**
(toll free)

From au cellphones:

113 area code not required
(toll free)

Pressing "zero" will connect you
to an operator, after calling "157"
on your au cellphone.

Sales: KDDI Corporation
Okinawa Cellular Telephone Company
Manufactured by CASIO COMPUTER CO., LTD.


Read this to access to the
au On-Line Manual



MN6400YAA-1
June 2008, 1st Edition



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.